

Voting on the ExpressVote

1. Make Your Choices

Mark Your Choices

Make your choices by touching inside the box for your candidate or answer, or by using the accessible device. The box will turn green when selected.

Assistive Voting

For assistive voting, plug headphones into the jack and detach the audio-tactile keypad from under the Access Compartment. Use the keypad to make selections, following the audio instructions on the headphones.

Display Options

If needed, use the Contrast button for black-and-white mode or the Zoom button to make text larger.

How to Vote for an Official Write-In Candidate


To vote for a write-in, select the Write-In option in the contest, type the person's name on the screen keyboard, and select Accept.

How to Change a Choice

To change your choice, select it again to remove it. The machine will not let you vote for too many choices in a race.

Move Between Contests

Use the Previous and Next buttons to move through contests.

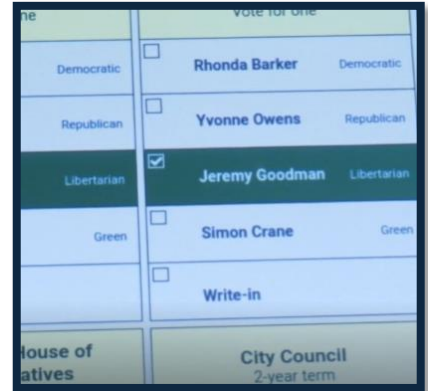


2. Review and Edit Your Ballot

Review Your Choices

When finished, select the Review Selections button to review your choices. "No Selection" will appear for contests you skipped. You do not have to vote in every race.

Change from Summary Screen

To make a change, select the contest on the summary screen.

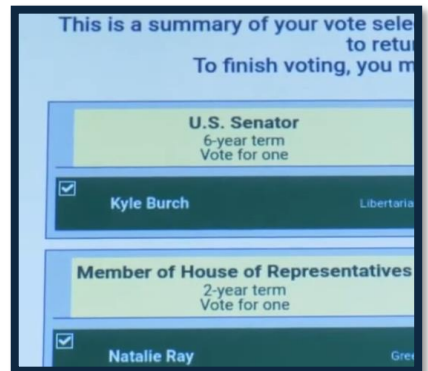

3. Print and Cast Your Ballot

Print Your Ballot

If everything looks correct, select Next, then select the Print Ballot button. On the next screen, select Print, or to change, select Return to Ballot.

Review Printed Ballot

Carefully check your printed ballot.

How to Make Changes After Printing

If you need changes after printing, ask a poll worker. They will spoil your ballot and give you a new one to start over.

Cast Your Ballot

Your ballot is not counted yet. Follow the poll worker's instructions to cast it in the scanner or ballot box.

